

All MAR-K™ bolts come with nut and lockwasher and all hardware pieces are priced by the piece (each) unless otherwise noted.



CARRIAGE BOLT
Smooth head and square shoulder; for bed strips.

- Polished Stainless**
- 100112 1/4-20 x 3/4" ... \$1.80
 - 100113 1/4-20 x 1 1/4" .. 1.80
 - 102719 1/4-20 x 1 1/2" .. 2.05
 - 100114 1/4-20 x 2" 2.15
 - 100115 1/4-20 x 2 1/2" .. 2.25
 - 100116 5/16-18 x 3/4" ... 1.80
 - 100117 5/16-18 x 1 1/2" .. 1.90
 - 100118 5/16-24 x 1 1/2" 3.45
 - 102717 5/16-18 x 2" 2.25
 - 100267 5/16-18 x 3" 2.20
 - 100286 5/16-18 x 4" 2.80
 - 100120 3/8-16 x 4" 3.15
 - 100121 3/8-16 x 5" 4.05
 - 100122 3/8-16 x 6" 4.95
 - 100163 3/8-16 x 8 1/2" 14.20
 - 100511 3/8-16 x 10" 11.05
 - 100123 3/8-16 x 12" 11.75
 - 100124 1/2-13 x 4 1/2" .. 5.60
 - 100141 1/2-13 x 6" 7.35
 - 102348 1/2-13 x 10 1/2" 24.55



RIBBED NECK BOLT
Like the carriage bolt, the ribbed neck bolt has a smooth head; however, it gets its name from the "ribbed" shoulder which allows it to be bolted through a round hole.

- Polished Stainless**
- 100500 1/4 x 1 1/4" .. \$7.00
 - 100502 5/16 x 1 1/2" . 2.70
- Unpolished Stainless**
- 100501 1/4 x 1 1/4" .. \$1.80
 - 100503 5/16 x 1 1/2" . 2.25
- Zinc Plated**
- 100479 1/4 x 1 1/4" . \$0.80
 - 100504 5/16 x 1 1/2" ... 1.05

- Unpolished Stainless**
- 100125 1/4-20 x 3/4" ... \$1.15
 - 100126 1/4-20 x 1 1/4" .. 1.25
 - 102720 1/4-20 x 1 1/2" .. 1.45
 - 100127 1/4-20 x 2" 1.45
 - 100128 1/4-20 x 2 1/2" .. 1.70
 - 100129 5/16-18 x 3/4" ... 1.25
 - 100130 5/16-18 x 1 1/2" 1.25
 - 100131 5/16-24 x 1 1/2 2.45
 - 102718 5/16-18 x 2" 1.60
 - 100268 5/16-18 x 3" 1.70
 - 100287 5/16-18 x 4" 2.25
 - 100133 3/8-16 x 4" 2.70
 - 100134 3/8-16 x 5" 3.35
 - 100135 3/8-16 x 6" 4.50
 - 100166 3/8-16 x 8 1/2" 16.00
 - 100512 3/8-16 x 10" 10.40
 - 100136 3/8-16 x 12" 15.00
 - 100137 1/2-13 x 4 1/2" .. 4.80
 - 100144 1/2-13 x 6" 7.05
 - 102347 1/2-13 x 10 1/2" 20.85

- Zinc Plated**
- 100138 1/4-20 x 3/4" ... \$0.35
 - 100139 1/4-20 x 1 1/4" .. 2.00
 - 102312 1/4-20 x 2 1/2" .. 0.55
 - 100142 5/16-18 x 3/4" ... 0.45
 - 100143 5/16-18 x 1 1/2" 1.57
 - 100269 5/16-18 x 3" 0.70
 - 100146 3/8-16 x 4" 0.80
 - 100147 3/8-16 x 5" 2.00
 - 100148 3/8-16 x 6" 4.00
 - 100169 3/8-16 x 8 1/2" .. 3.15
 - 100513 3/8-16 x 10" 2.25
 - 100149 3/8-16 x 12" 2.45
 - 100150 1/2-13 x 4 1/2" .. 6.00
 - 100145 1/2-13 x 6" 3.15
 - 102343 1/2-13 x 10 1/2" 10.50



PHILLIPS FENDER BOLT
Made to bolt the fenders to the bed side on step-side trucks. The phillips fender bolts may also be used to attach a replacement angle strip to the bed side where it was originally welded on GM Stepsides.

- Polished SST 1/2 x 5"**
- 100477 POL SST \$2.68
 - 100478 UNPOL SST..... 2.25
 - 100505 ZINC 1.60
- 5/16 x 3/4"**
- 100489 POL SST \$3.35
 - 100490 UNPOL SST..... 3.05




BED-TO-FRAME WASHER
These washers are placed in the counter-sunk wood holes for the bed-to-frame bolt to pass through. The hole in the washer is square and offset in GM washers and round and centered for Ford.

- Polished Stainless**
- 100100 1 1/2 x 3/8" SQUARE HOLE OFFSET (GM) \$4.05
 - 100102 1 7/8 x 1/2" ROUND HOLE CENTER (FORD) 3.35
 - 100101 1 7/8 x 1/2" SQUARE HOLE OFFSET (GM)..... 4.50
- Unpolished Stainless**
- 100104 1 1/2 x 3/8" SQUARE HOLE OFFSET (GM)..... \$2.70
 - 100106 1 7/8 x 1/2" ROUND HOLE CENTER (FORD) 2.25
 - 100105 1 7/8 x 1/2" SQUARE HOLE OFFSET (GM) 3.05
- Zinc Plated**
- 100108 1 1/2 x 3/8" SQUARE HOLE OFFSET (GM)..... \$1.60
 - 100110 1 7/8 x 1/2" ROUND HOLE CENTER (FORD) 1.05
 - 100109 1 7/8 x 1/2" SQUARE HOLE OFFSET (GM)..... 1.60

For Dodge washers, see "Hard to Find Hardware Pieces for Dodge Pickups" on page 39.

To Prevent Galling: Always use anti-seize compound on the threads of stainless steel fasteners. Do not use a high-speed power tool or impact wrench to install the fasteners. Anti-seize compounds are available at most auto supply stores.

SEE BOTTOM OF PAGE 40 FOR INFORMATION ON HOW TO PREVENT GALLING ON STAINLESS FASTENERS.

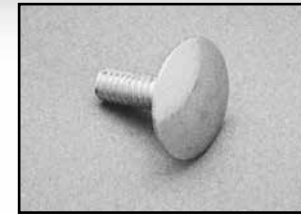

STEP BOLT
Used to bolt the step to the support brace. They are available in zinc plated steel. The original size is 1/4 x 3/4. Also available in 5/16 x 3/4.



HEX HEAD SCREW
Used in bolting the rear cross sill to the bed sides, or in bolting the front bed panel to the bed sides.



CLUTCH HEAD BOLT
Available in zinc plated only, this 3/4" bolt is used to bolt the fender to the bed side on stepside trucks. Notice the shape of the drive. This is the original fender bolt for early GM stepsides.




ACORN NUT
Acorn nut makes a decorative finish on a bolt that is exposed as well as protection of the thread from the elements. Phillips screw sold separately.


HARD TO FIND HARDWARE PIECES FOR DODGE PICKUPS



SCREW AND CAPPED NUT
1/4-20 x 5/8" Stainless screw and plated steel nut with stainless cap for 78-79 "Red Express" trim boards. Complete trim board kits, see page 63.

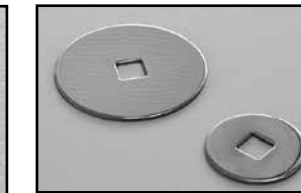

BED-TO-FRAME WASHER
3" Diameter washer (left) used for bed-to-frame mounting before 1953 model year.

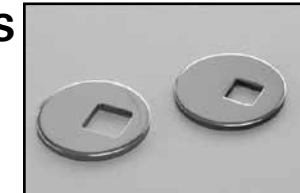

BED-TO-FRAME WASHER
1 1/2" Diameter washer (left) with 1/2" square hole offset



PHILLIPS FENDER BOLT DODGE STYLE 5/16 x 1"
Phillips bolts with a 1" diameter head. Includes nut and 1" washer. Mounts fenders to the bed sides. Available in stainless and steel options.

1 7/8" Diameter washer (right) with 1/2" square hole in center. For bed-to-frame mounting 53-60 Step, 61-65 Long Step and 53-68 Power Wagon.

1 1/2" Diameter washer (right) with 3/8" square hole offset. Used for bed-to-frame mounting for 65-85 stepsides.

HEX HEAD SCREW
5/16-18 x 3/4" with washer. Attaches front bed panel to the bed sides.

FENDER WASHER
1 7/16 x 1 x 1/8" Rectangular washer used with fender mounting bolt and nut. For replacement only.

FLAT HEAD SCREW
5/16-18 x 5/8" Phillips stainless flat head screw. Attaches center tailgate hinge to rear sill. Two (2) required.

LONG THREADED ROD
5/16" Diameter rod 55 1/2" long threaded each end for mounting front bed panel to bed sides. Includes nuts and washers. High-side bed only.



INDENTED HEX WASHER HEAD BOLT
This bolt is used in several instances, most often in bolting the front bed panel to the bed side, as well as bolting the rear cross sill to the bed.



T-BOLT FASTENER FOR HIDDEN BOLTS BED STRIPS