

MAR-K<sup>™</sup> bed side curls are formed in this tool in our bed side cell. It shapes the metal in a straight line and keeps it consistently strong and reliable.

110776

GM	
Short St	tep with Stake Pocket Holes & Fender Holes
102960	34-36 STEP DR CHEVY - STRAIGHT \$455.00 ea
102961	34-36 STEP PA** CHEVY - STRAIGHT 455.00 ea
102930	37-38 STEPSIDE DR CHEVY ONLY 393.00 ea
102931	37-38 STEPSIDE PA CHEVY ONLY 393.00 ea
102936	39 STEPSIDE DR CHEVY ONLY487.00 ea
102937	39 STEPSIDE PA CHEVY ONLY487.00 ea
102845	40 STEPSIDE DR CHEVY ONLY487.00 ea
102846	40 STEPSIDE PA CHEVY ONLY487.00 ea
102633	41-46 STEPSIDE DR CHEVY ONLY 393.00 ea
102634	41-46 STEPSIDE PA CHEVY ONLY 393.00 ea
102635	47-53 STEPSIDE DR
102636	47-53 STEPSIDE PA**
102637	54-55 1ST STEP DR-SOLD AS PAIRS ONLY 467.00 ea
102638	54-55 1ST STEP PA-SOLD AS PAIRS ONLY 467.00 ea
102639	55-2ND-59 STEPSIDE DR467.00 ea
102640	55-2ND-59 STEPSIDE PA467.00 ea
CAME	D/SUBURBAN INNER PANELS SEE NEXT COLUMN.
102641	60-66 STEPSIDE DR\$467.00 ea
102642	60-66 STEPSIDE PA467.00 ea
102643	67-72 STEPSIDE DR467.00 ea
102644	67-72 STEPSIDE PA467.00 ea
110770	73-76 STEPSIDE DR 503.00 ea

110771	73-76 STEPSIDE PA	503.00 ea
110772	77-87 STEPSIDE DR	503.00 ea
110773	77-87 STEPSIDE PA	503.00 ea
Short S	tep no Stake Pocket Holes w/Fender	Holes
102962	34-36 STEP DR CHEVY - STRAIGHT \$4	455.00 ea
102963	34-36 STEP PA** CHEVY - STRAIGHT	455.00 ea
102932	37-38 STEPSIDE DR CHEVY ONLY	393.00 ea
102933	37-38 STEPSIDE PA CHEVY ONLY	393.00 ea
102938	39 STEPSIDE DR CHEVY ONLY	487.00 ea
102939	39 STEPSIDE PA CHEVY ONLY	487.00 ea
102847	40 STEPSIDE DR CHEVY ONLY	487.00 ea
102848	40 STEPSIDE PA CHEVY ONLY	487.00 ea
102732	41-46 STEPSIDE DR CHEVY ONLY	393.00 ea
102733	41-46 STEPSIDE PA CHEVY ONLY	393.00 ea
102734	47-53 STEPSIDE DR	
102735	47-53 STEPSIDE PA**	
102736	54-55 1ST STEP DR-SOLD AS PAIRS ONLY	467.00 ea
102737	54-55 1ST STEP PA-SOLD AS PAIRS ONLY	467.00 ea
102738	55-2ND-59 STEPSIDE DR	
102739	55-2ND-59 STEPSIDE PA	
102740	60-66 STEPSIDE DR	467.00 ea
102741	60-66 STEPSIDE PA	
102742	67-72 STEPSIDE DR	
102743	67-72 STEPSIDE PA	
110774	73-76 STEPSIDE DR	
110775	73-76 STEPSIDE PA	503.00 ea

77-87 STEPSIDE DR ...... 503.00 ea

77-87 STEPSIDE PA ......503.00 ea

#### **COMPLETE BED SIDES -**

- MAR-K<sup>™</sup> makes quality reproduction bed sides for 34-87 GM Stepsides and 51-72 Ford Flareside pickups.
- We use 16 gage electro-galvanized steel to form the bed sides.
- MAR-K<sup>™</sup> bed sides made in Oklahoma City, USA!
- A complete GM bed side is made up of the bed side panel, the front and rear stake pockets, and the steel angle strip.
- A complete Ford bed side is made up of the bed side panel, the front and rear stake pockets and front and back extension panels.
- Sides are ready to clean, prime, paint and bolt together. We provide holes in the bed sides for fender installation.
- Bed sides can be ordered with or without the stake pocket hole, which is the large square hole in the top of the side above the stake pocket.
- Bed sides are also available with or without the chain latch for custom applications.
- Bed sides ship by Motor Freight and must be prepaid.







BED SIDES FOR CHEVY CAMEO/GMC SUBURBAN MAR-K<sup>™</sup> makes the inner steel bed sides for Cameo and Suburban trucks. These trucks have an outer, fiberglass shell, not available from  $MAR-K^{TM}$ .

Inner Panel with Stake Pocket Holes and Holes for Skin 110397 55-58 CAMEO/SUB DR INNER PANEL.\$655.00 ea 110384 55-58 CAMEO/SUB PA INNER PANEL.... 655.00 ea Inner Panel no Stake Pocket Holes with Holes for Skin 110557 55-58 CAMEO/SUB DR INNER PANEL, \$655.00 ea 110558 55-58 CAMEO/SUB PA INNER PANEL.... 655.00 ea

### **MAKING CUSTOM BED SIDES**

MAR-K™ makes bed sides in a dedicated manufacturing "cell" so that custom bed sides with upgrades can be made as soon as possible.

## GM

110581

110782

110783

110784

110785

\*Center stake pockets included on 40-53 bed sides.

Long Ste	p with Stake Pocket Holes & Fender Holes
102940	37-38 STEPSIDE DR CHEVY ONLY \$547.00 ea
102941	37-38 STEPSIDE PA CHEVY ONLY 547.00 ea
102942	39 STEPSIDE DR CHEVY ONLY547.00 ea
102943	39 STEPSIDE PA CHEVY ONLY547.00 ea
102966	37-38 STEPSIDE DR GMC 1/2TON ONLY706.00 ea
102967	37-38 STEPSIDE PA GMC 1/2TON ONLY706.00 ea
102970	37-38 STEPSIDE DR GMC 3/4TON ONLY522.00 ea
102971	37-38 STEPSIDE PA GMC 3/4TON ONLY522.00 ea
102956	40 STEPSIDE DR* CHEVY ONLY 522.00 ea
102957	40 STEPSIDE PA* CHEVY ONLY 522.00 ea
110554	41-46 STEPSIDE DR* CHEVY ONLY 522.00 ea
110555	41-46 STEPSIDE PA* CHEVY ONLY 522.00 ea
110540	47-53 STEPSIDE DR* 522.00 ea
110541	47-53 STEPSIDE PA* ** 522.00 ea
110542	54-55 1st STEP DR-SOLD AS PAIRS ONLY620.00 ea
110543	54-55 1st STEP PA-SOLD AS PAIRS ONLY620.00 ea
110544	55-2nd-57 89" STEPSIDE DR 620.00 ea
110545	55-2nd-57 89" STEPSIDE PA 620.00 ea
110546	57-59 97" STEPSIDE DR 620.00 ea
110547	57-59 97" STEPSIDE PA 620.00 ea
110548	60-62 STEPSIDE DR 620.00 ea
110549	60-62 STEPSIDE PA 620.00 ea
110552	63-66 STEPSIDE DR 620.00 ea
110553	63-66 STEPSIDE PA 620.00 ea
110550	67-72 STEPSIDE DR 620.00 ea
110551	67-72 STEPSIDE PA 620.00 ea
110778	73-76 STEPSIDE DR657.00 ea
110779	73-76 STEPSIDE PA657.00 ea
110780	77-87 STEPSIDE DR657.00 ea
110781	77-87 STEPSIDE PA657.00 ea
Long Ste	p no Stake Pocket Holes with Fender Holes

102944	37-38 STEPSIDE DR CHEVY ONLY \$547.00 ea
102945	37-38 STEPSIDE PA CHEVY ONLY 547.00 ea
102946	39 STEPSIDE DR CHEVY ONLY547.00 ea
102947	39 STEPSIDE PA CHEVY ONLY547.00 ea
102968	37-38 STEPSIDE DR GMC 1/2 TON ONLY706.00 ea
102969	37-38 STEPSIDE PA GMC 1/2 TON ONLY706.00 ea
102972	37-38 STEPSIDE DR GMC 3/4TON ONLY522.00 ea
102973	37-38 STEPSIDE PA GMC 3/4TON ONLY522.00 ea
102958	40 STEPSIDE DR* CHEVY ONLY 522.00 ea
102959	40 STEPSIDE PA* CHEVY ONLY 522.00 ea
110568	41-46 STEPSIDE DR* CHEVY ONLY 522.00 ea
110569	41-46 STEPSIDE PA* CHEVY ONLY 522.00 ea
110570	47-53 STEPSIDE DR* 522.00 ea
110571	47-53 STEPSIDE PA* ** 522.00 ea
110572	54-55 1st STEP DR-SOLD AS PAIRS ONLY 620.00 ea
110573	54-55 1st STEP PA-SOLD AS PAIRS ONLY 620.00 ea
110574	55-2nd-57 89" STEPSIDE DR 620.00 ea
110575	55-2nd-57 89" STEPSIDE PA 620.00 ea
110576	57-59 97" STEPSIDE DR 620.00 ea
110577	57-59 97" STEPSIDE PA 620.00 ea
110578	60-62 STEPSIDE DR 620.00 ea
110579	60-62 STEPSIDE PA 620.00 ea
110582	63-66 STEPSIDE DR 620.00 ea
110583	63-66 STEPSIDE PA 620.00 ea
110580	67-72 STEPSIDE DR 620.00 ea

67-72 STEPSIDE PA....

73-76 STEPSIDE DR .....

77-87 STEPSIDE DR .....

77-87 STEPSIDE PA .....

73-76 STEPSIDE PA .....

**BED SIDES AND UPGRADES** FOR GM



# **BED SIDE UPGRADES**

MAR-K<sup>™</sup> now offers ways to customize your GM Stepside and Ford Flareside bed sides. Upgrades allow you to change the way a bed side is made

to better fit your needs. Eliminate the latch on your bed sides or give yourself shiny stainless angles. Whatever you choose, you can have bed sides "your way" at



MAR-K™! Be sure to mention the upgrade part number for EACH bed side when ordering parts.



You need to order two (2) of each upgrade for a pair of bed sides. Allow additional time for delivery. Custom parts are not returnable. Ford Flareside Upgrades are found on page 50.

### **GM 34-53 STEPSIDE UPGRADES**

102836	34-36/47-48 FUEL HOLE PA/RH ONLY \$56.00 ea
102794	TEARDROP INSTALL CURL AT FRONT 90.00 ea
102795	TEARDROP INSTALL CURL AT REAR 90.00 ea
102803	ANGLE REPLACE STEEL - POL SST 62.00 ea
102804	ANGLE REPLACE STEEL - UNPOL SST 56.00 ea
102806	ANGLE NOT WELDED, BUT INCLUDED 23.00 ea
102807	ANGLE STRIP WITH NO HOLES23.00 ea
102818	FENDER HOLES DELETE28.00 ea
102832	STAKE POCKET, FRONT NOT WELDED 23.00 ea
102833	STAKE POCKET, REAR NOT WELDED 23.00 ea
102802	NO LATCH/NO CHAIN HOLES34.00 ea
102870	HOLES FOR MAR-KTG W/LATCH & LINK 56.00 ea
102809	AXLE CUT-OUT REMOVED118.00 ea

#### **GM 40-53 STEPSIDE UPGRADES**

102805	HOLES FOR MAR-K FLUSHTG W/HAND \$56.00 ea
102831	STAKE POCKET, CENTER NOT WELDED 23.00 ea
102809	AXLE CUT-OUT REMOVED118.00 ea
103077	HOLES FOR MAR-KTG W/PUSH BUTTON. 56.00 ea
103034	RAISED ANGLE INSTALLATION 56.00 ea

## CM E4 07 STEDSIDE LIDGDADES

GIVI 54	-8/STEPSIDE UPGRADES
100275	TEARDROP INSTALL CURL AT REAR \$95.00 ea
102803	ANGLE REPLACE STEEL - POL SST 62.00 ea
102804	ANGLE REPLACE STEEL - UNPOL SST 56.00 ea
102806	ANGLE NOT WELDED, BUT INCLUDED 23.00 ea
102807	ANGLE STRIP WITH NO HOLES23.00 ea
102818	FENDER HOLES DELETE28.00 ea
102819	DIMPLES (EMBOSSMENT) DELETE28.00 ea
102832	STAKE POCKET, FRONT NOT WELDED 23.00 ea
102833	STAKE POCKET, REAR NOT WELDED 23.00 ea
102809	AXLE CUT-OUT REMOVED118.00 ea
102802	NO LATCH/NO CHAIN HOLES34.00 ea
102805	HOLES FOR MAR-K FLUSHTG W/HANDLE 56.00 ea
102870	HOLES FOR MAR-KTG W/LATCH & LINK 56.00 ea
103077	HOLES FOR MAR-KTG W/PUSH BUTTON. 56.00 ea
103034	RAISED ANGLE INSTALLATION 56.00 ea


Individual teardrops also sold separately. See page 52.

.657.00 ea

.657.00 ea

.657.00 ea

.... 657.00 ea

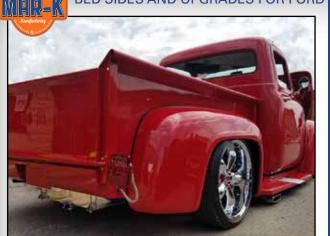

Addison Augusta's 1956 Ford F100 is rocking those MAR-K™ bed sides.



### FORD

FUND		
<b>Short Fla</b>	re with Stake Pocket Holes &	<b>Fender Hole</b>
102586	51-52 FLARESIDE DR	\$367.00 ea
102587	51-52 FLARESIDE PA	367.00 ea
120133	53-56 FLARESIDE DR	367.00 ea
120132	53-56 FLARESIDE PA	367.00 ea
120261	57-60 FLARESIDE DR	438.00 ea
120262	57-60 FLARESIDE PA	438.00 ea
120263	61-64 FLARESIDE DR	458.00 ea
120264	61-64 FLARESIDE PA	458.00 ea
120265	65-72 FLARESIDE DR	367.00 ea
120266	65-72 FLARESIDE PA	367.00 ea
Short Fla	re no Stake Pocket Holes with	Fender Holes
Short Flai 102534	re no Stake Pocket Holes with   51-52 FLARESIDE DR	
		\$367.00 ea
102534	51-52 FLARESIDE DR	\$367.00 ea 367.00 ea
102534 102535	51-52 FLARESIDE DR 51-52 FLARESIDE PA	\$367.00 ea 367.00 ea 367.00 ea
102534 102535 120136	51-52 FLARESIDE DR 51-52 FLARESIDE PA 53-56 FLARESIDE DR	\$367.00 ea 367.00 ea 367.00 ea 367.00 ea
102534 102535 120136 120135	51-52 FLARESIDE DR 51-52 FLARESIDE PA 53-56 FLARESIDE DR 53-56 FLARESIDE PA	\$367.00 ea 367.00 ea 367.00 ea 367.00 ea 438.00 ea
102534 102535 120136 120135 120267	51-52 FLARESIDE DR	\$367.00 ea 367.00 ea 367.00 ea 367.00 ea 438.00 ea
102534 102535 120136 120135 120267 120268	51-52 FLARESIDE DR	\$367.00 ea 367.00 ea 367.00 ea 367.00 ea 438.00 ea 438.00 ea 458.00 ea
102534 102535 120136 120135 120267 120268 120269	51-52 FLARESIDE DR	367.00 ea 367.00 ea 367.00 ea 367.00 ea 438.00 ea 438.00 ea 458.00 ea
102534 102535 120136 120135 120267 120268 120269 120270	51-52 FLARESIDE DR	367.00 ea 367.00 ea 367.00 ea 367.00 ea 438.00 ea 438.00 ea 458.00 ea 458.00 ea 367.00 ea

TECH TIP: FORD BED SIDES - Ford front bed panels are always bolted to the bed side at the top angled surface (two bolts on each side), and riveted or bolted or welded at the vertical surface. Customers drill their own holes or weld them to the front bed panel as they see fit.

## **BED SIDE UPGRADES**

Upgrades allow you to change the way a bed side is made to better fit your needs. Eliminate the latch or give yourself teardrops welded into your curls. Whatever you choose, you can have bed sides



"your way" at MAR-K™! You need to order two (2) of each upgrade for a pair of bed sides. Allow additional time for delivery. Custom parts are not returnable. GM Stepside Upgrades are found on page 49.

# FORD 51-72 FLARESIDE (STEPSIDE)

ı	1 0110 0	1 /2 I EARLOIDE (OTEL OIDE)
	102798 T	EARDROP INSTALL CURL AT FRONT \$90.00 ea
	102799 T	EARDROP INSTALL CURL AT REAR 90.00 ea
	102802 N	NO EYEBOLT HOLES (FOR CHAIN LATCH). 34.00 ea
	102818 F	ENDER HOLES DELETE28.00 ea
	102832 S	STAKE POCKET, FRONT NOT WELDED 23.00 ea
	102833 S	STAKE POCKET, REAR NOT WELDED 23.00 ea
	102838 E	XTENSION, FRONT NOT WELDED 23.00 ea
	102839 E	XTENSION, REAR NOT WELDED23.00 ea
	103031 R	RAISED BEDSIDE FLANGE INSTALL 140.00 ea
	102849 H	HOLES FOR MAR-KTG W/LATCH & LINK 56.00 ea
	103023 H	HOLES FOR MAR-K FLUSHTG W/HANDLE 56.00 ea
1		

# **BED SIDE WOOD FLOOR SEAL**



The Box Side Wood Floor Seal for 51-72 Ford Flareside trucks is a black rubber seal made to fit between the bed side flange and the wood floor on each side. This part is purchased from an outside vendor.

51-72 FORD Short Flareside 120232 BED SIDE WOOD FLOOR SEAL. .\$24.00 pr


**BED SIDETEARDROPS** - Add that finishing touch to your Ford or early GM bed side with a MAR-K™ teardrop. One 16 gage steel piece is yours FREE when you purchase your early GM (34-53) or the Ford bed sides listed below. Just weld it in the curl of your Flareside or Stepside truck to achieve the latest smooth look. Two pieces required per bed side. Sold per piece. GM 54-87 are for rear curl only.

100293	34-39 GM STEPSIDE DR/PA\$11.00 ea
102748	40-53 GM STEPSIDE DR/PA11.00 ea
100273	54-66 GM /FITS 54-87 MAR-K BED SIDE DR 19.00 ea
100274	54-66 GM /FITS 54-87 MAR-K BED SIDE PA. 19.00 ea
100276	67-87 GM STEP (ORIGINAL BED SIDES) DR. 19.00 ea
100277	67-87 GM STEP (ORIGINAL BED SIDES) PA . 19.00 ea
102665	51-72 FORD FLARESIDE DR/PA11.00 ea


**BED SIDES ARE SHIPPED BY MOTOR** FREIGHT AND MUST BE PREPAID.

#### **BED SIDE INNER REPAIR PANELS**

- Available for GM short bed (shown) and long bed fleetside trucks.
- · These go in front of and behind the wheel well to repair the rusted or damaged inner wall of the fleetside bed sides.
- Holes are punched for attachment to the wheel tubs and the wood bed.
- Thetopisembossed with an offset for ease of welding and placement of panels.
- These panels are made of 16-gage electro-galvanized steel.



• Includes complete instructions.

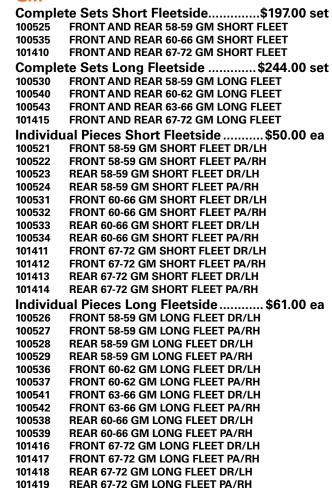



The top of MAR-K's™ Fleetside Repair Panels is embossed with an offset using this CNC press brake.

## WHEELHOUSE REPAIR FLANGE FOR 58-66 GM

• This flange for the 58-59 GM Fleetside and 60-66 GM Fleetside trucks is used to repair the rusted or damaged area of the wheel tub where it meets the wood floor.



- 16-gage electro-galvanized steel flange has bed strip embossment like original.
- Requires 2 flanges per truck.
- Instructions included.
- Made by MAR-K<sup>™</sup> in Oklahoma City, USA.

# **GM Fleetside**

100585 58-59 GM FLEETSIDE.....\$50.00 ea 100586 60-66 GM FLEETSIDE......50.00 ea

TechTip forWheelhouse Repair Flange: This part is to repair the wheel tub flange where it meets the wood floor. These areas are prone to rusting because of the wood holding moisture and the steel flange resting on the wood floor. This repair flange may be used to completely replace this flange or be used in pieces to repair this area.

Tech Tip for Inner Repair Panels: These replacement panels extend from the front bed panel to the wheelhouse opening and from the rear stake pocket to the wheelhouse opening. They will replace the sheet metal from the lower flange with holes to the top of the wheelhouse opening on the bed side. Experienced installers may choose not to use the entire replacement panel if it is not needed, but the instructions show the entire panel being used. We strongly advise you to read the instructions thoroughly and understand that cutting and welding are involved before proceeding.