


MAR-K

BED BOLT KITS

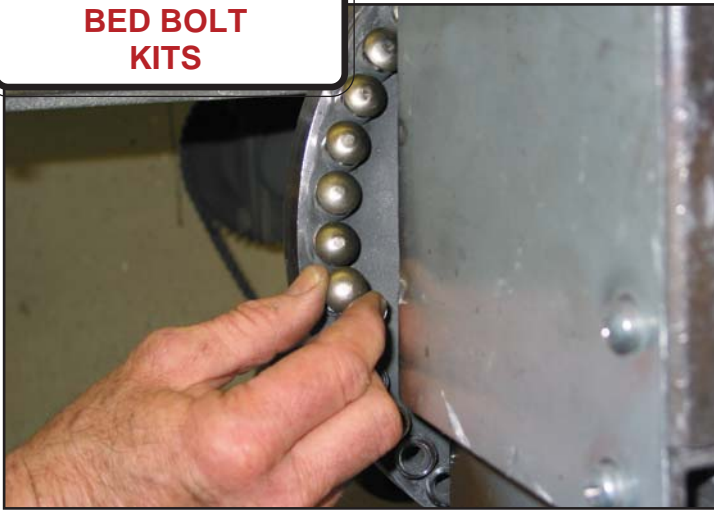

Unpolished stainless bolts are inserted into this special polishing machine to make the heads shine like chrome!



RIBBED NECK CARRIAGE BOLT

FOR STRIPS WITH ROUND HOLES-

At **MAR-K**, we punch square holes in all of our bed strips and angle strips. We, therefore, include regular square shoulder carriage bolts

in the bed bolt kits. If you are using your original strips, check the hole shape. Some trucks had round holes originally. If this is the case, you will need ribbed neck bolts in your bed bolt kit instead of square shoulder carriage bolts. Ribbed neck bolts are made to fit into a round hole. If you are going to drill your own round holes, you will need ribbed neck bolts. Angle covers are only sold without holes and require ribbed neck bolts. The same is true for purchases of bed strips or angle strips without holes.

PRICE IS EXTRA PER KIT WHEN RIBBED NECK BOLTS ARE USED.

RIBBED NECK KIT PART NUMBERS ARE NOT LISTED IN OUR CATALOG.

They can be found online for kits with Angle Covers or you can call our office to find the kit you need.

BED BOLT KITS -

- Hardware kits include all bolts, nuts, and washers to install the bed wood, bed strips, and angle strips.
- Hardware kits are available in polished stainless, unpolished stainless and zinc plated steel.
- The bolts in the hardware kits are carriage bolts. This means they have a smooth rounded head and a square shoulder to fit into a square hole.
- Polished stainless bolts are shiny like chrome, while unpolished stainless have a matte finish.
- The zinc plated steel bolts appear shiny, but you need to paint these bolts to prevent rusting.
- The large bolts that bolt the bed to the frame are included in the bed bolt kit, along with the large washers that fit in the bed wood countersunk holes.
- Bolts can be purchased separately, and are also available in polished stainless, unpolished stainless or zinc plated steel. For individual hardware pieces, see pages 34-35.
- *Kits assembled in Oklahoma City, USA.*



1972 GMC Stepside - William Thornton, Lenox, MA Shows how the bed strip bolts fall between the wood boards and bolt underneath the wood. Where there is not a cross sill, the bolts are secured by flat washers.

MAR-K Quality Parts also sells bed-to-frame kits and strips and sides kits. Call for prices on both. These are not listed online or in this catalog.

Bed-to-frame: Kit includes all large bolts, nuts and washers to attach the bed wood to the frame. The large bed-to-frame washers sit in the countersunk holes and the bed-to-frame bolt goes through this washer.

Strips and Sides: Kit includes all the carriage bolts, nuts and washers to bolt the strips and bed sides to the bed wood.

SPECIAL CONDITION 73-87 GM STEPSIDE

This pickup originally had the angle strip bolts welded to the angle. This makes removal and replacement of the bolts very difficult and may cause distortion or damage to the angle. You may want to keep the original bolts in place if the threads are not damaged or rusted. You can remove the edge board without taking the angle strip bolts out by destroying the old edge boards. New edge boards are installed by sawing a slot from the angle strip bolt hole to the edge of the board, then sliding the edge board under the angle strip. **MAR-K** complete bed bolt kits above include standard carriage bolts for replacing the original angle strip bolts. These would normally be used when replacing the angle strip with a new one using square holes. When replacing bolts in the original angle, ribbed neck bolts may be specified.

Polished Stainless Steel

Unpolished Stainless Steel

Zinc Plated

GM

Short Stepside Kits

110754	34-36 SHORT STEP CHEVY	\$92.00
110339	37-39 SHORT STEP CHEVY	92.00
110854	37-39 SHRT CHEV (NO SPARE)	92.00
110342	40-45 SHORT STEP CHEVY	92.00
110345	46 SHORT STEP CHEVY	92.00
110348	47-51 SHORT (8 STRIPS)	99.00
110351	51-53 SHORT (7 STRIPS)	96.00
110354	54-55 1st SHORT STEP	94.00
110357	55-2nd-59 SHORT STEP	92.00
102769	55-58 CAMEO/SUBURBAN	137.00
110360	60-66 SHORT STEP	92.00
110363	67-72 SHORT STEP	92.50
110366	73-87 SHORT STEP	120.00

Long Stepside Kits

110915	35-36 LONG STEP GMC	\$120.00
110902	37-38 LONG STEP GMC	100.00
110924	37-39 LONG STEP CHEVY	100.00
110369	40-45 LONG STEP CHEVY	100.00
110372	46 LONG STEP CHEVY	100.00
110375	47-51 LONG (8 STRIPS)	122.00
110273	51-53 LONG (7 STRIPS)	118.00
110279	54-55 1st LONG STEP	100.00
102521	55 2nd-57 LONG STEP 89"	100.00
110288	57-59 LONG STEP 97"	105.00
110291	60-62 LONG STEP	112.50
110294	63-66 LONG STEP	100.00
110297	67-72 LONG STEP	102.50
110300	73-87 LONG STEP	128.00

1 Ton Stepside Kits

110270	47-51 1 TON (8 STRIPS)	\$117.50
110276	51-53 1 TON (7 STRIPS)	112.50
102439	54-59 1 TON	111.00
102707	60-62 1 TON	121.00
102710	63-66 1 TON	112.00

Panel Truck/Canopy Express Kits

110286	47-51 1/2 TON 82"	\$100.00
--------	-------------------------	----------

Short Fleetside Kits

110303	58-59 SHORT WIDE	\$115.00
110306	60-66 SHORT WIDE	116.50
110309	67-72 SHORT WIDE	122.50

Long Fleetside Kits

110312	58-59 LONG WIDE	\$137.50
110315	60-62 LONG WIDE	145.00
110318	63-66 LONG WIDE	126.50
110321	67-72 LONG WIDE	133.50
110899	73-80 LONG WIDE	130.00

Longhorn Kits

110324	69-72 103"	\$149.50
--------	------------------	----------

GM

Short Stepside Kits

110755	34-36 SHORT STEP CHEVY	\$72.00
110340	37-39 SHORT STEP CHEVY	72.00
110855	37-39 SHRT CHEV (NO SPARE)	72.00
110343	40-45 SHORT STEP CHEVY	72.00
110346	46 SHORT STEP CHEVY	72.00
110349	47-51 SHORT (8 STRIPS)	78.00
110352	51-53 SHORT (7 STRIPS)	74.00
110355	54-55 1st SHORT STEP	72.00
110358	55-2nd-59 SHORT STEP	72.00
102770	55-58 CAMEO/SUBURBAN	109.00
110361	60-66 SHORT STEP	72.00
110364	67-72 SHORT STEP	72.00
110367	73-87 SHORT STEP	94.00

Long Stepside Kits

110916	35-36 LONG STEP GMC	\$94.00
110903	37-38 LONG STEP GMC	82.00
110925	37-39 LONG STEP CHEVY	82.00
110370	40-45 LONG STEP CHEVY	82.00
110373	46 LONG STEP CHEVY	82.00
110376	47-51 LONG (8 STRIPS)	91.00
110274	51-53 LONG (7 STRIPS)	88.00
110280	54-55 1st LONG STEP	82.00
102522	55 2nd-57 LONG STEP 89"	82.00
110289	57-59 LONG STEP 97"	85.00
110292	60-62 LONG STEP	88.00
110295	63-66 LONG STEP	82.00
110298	67-72 LONG STEP	82.00
110301	73-87 LONG STEP	104.00

1 Ton Stepside Kits

110271	47-51 1 TON (8 STRIPS)	\$93.00
110277	51-53 1 TON (7 STRIPS)	93.00
102440	54-59 1 TON	93.00
102708	60-62 1 TON	93.00
102711	63-66 1 TON	93.00

Panel Truck/Canopy Express Kits

110498	47-51 1/2 TON 82"	\$80.00
--------	-------------------------	---------

Short Fleetside Kits

110304	58-59 SHORT WIDE	\$84.00
110307	60-66 SHORT WIDE	84.00
110310	67-72 SHORT WIDE	89.00

Long Fleetside Kits

110313	58-59 LONG WIDE	\$110.00
110316	60-62 LONG WIDE	110.00
110319	63-66 LONG WIDE	104.00
110322	67-72 LONG WIDE	104.00
101205	73-80 LONG WIDE	104.00

Longhorn Kits

110325	69-72 103"	\$107.50
--------	------------------	----------

GM

Short Stepside Kits

110756	34-36 SHORT STEP CHEVY	\$42.00
110341	37-39 SHORT STEP CHEVY	42.00
110854	37-39 SHRT CHEV (NO SPARE)	42.00
110344	40-45 SHORT STEP CHEVY	42.00
110347	46 SHORT STEP CHEVY	42.00
110350	47-51 SHORT (8 STRIPS)	42.00
110353	51-53 SHORT (7 STRIPS)	42.00
110356	54-55 1st SHORT STEP	42.00
110359	55-2nd-59 SHORT STEP	42.00
102771	55-58 CAMEO/SUBURBAN	45.00
110362	60-66 SHORT STEP	42.00
110365	67-72 SHORT STEP	42.00
110368	73-87 SHORT STEP	51.00

Long Stepside Kits

110917	35-36 LONG STEP GMC	\$45.00
110909	37-38 LONG STEP GMC	45.00
110926	37-39 LONG STEP CHEVY	45.00
110371	40-45 LONG STEP CHEVY	45.00
110374	46 LONG STEP CHEVY	45.00
110377	47-51 LONG (8 STRIPS)	45.00
110275	51-53 LONG (7 STRIPS)	45.00
110281	54-55 1st LONG STEP	45.00
102523	55 2nd-57 LONG STEP 89"	45.00
110290	57-59 LONG STEP 97"	48.00
110293	60-62 LONG STEP	48.00
110296	63-66 LONG STEP	45.00
110299	67-72 LONG STEP	45.00
110302	73-87 LONG STEP	54.00

1 Ton Stepside Kits

110272	47-51 1 TON (8 STRIPS)	\$50.00
110278	51-53 1 TON (7 STRIPS)	50.00
102358	54-59 1 TON	50.00
102709	60-62 1 TON	50.00
102712	63-66 1 TON	50.00

Panel Truck/Canopy Express Kits

110590	47-51 1/2 TON 82"	\$48.00
--------	-------------------------	---------

Short Fleetside Kits

110305	58-59 SHORT WIDE	\$50.00
110308	60-66 SHORT WIDE	50.00
110311	67-72 SHORT WIDE	50.00

Long Fleetside Kits

110314	58-59 LONG WIDE	\$57.00
110317	60-62 LONG WIDE	57.00
110320	63-66 LONG WIDE	54.00
110323	67-72 LONG WIDE	54.00
101206	73-80 LONG WIDE	54.00

Longhorn Kits

110326	69-72 103"	\$57.00
--------	------------------	---------

PERIMETER MOUNTING HARDWARE KIT - For Steel Floor Trucks includes all carriage bolts 5/16-18 X 3/4" to attach front bed panel, bed sides and wheel houses to the steel floor structure. Does not include Bed to Frame bolts.

Fleetside Steel Floor Kits

100295	67-72 SHORT/LONG WIDE	\$44.00
--------	-----------------------------	---------

Fleetside Steel Floor Kits

100296	67-72 SHORT/LONG WIDE	\$32.00
--------	-----------------------------	---------

Fleetside Steel Floor Kits

100294	67-72 SHORT/LONG WIDE	\$22.00
--------	-----------------------------	---------

Polished Stainless Steel

FORD

Short Flareside Kits

102349	51-52 SHORT FLARE	\$146.50
120433	53-60 SHORT FLARE	148.00
120413	61-72 SHORT FLARE	146.50
120451	76-79 SHORT FLARE	172.00
120420	80-87 SHORT FLARE 6BS...	172.50
120443	83-87 SHORT FLARE 5BS...	164.50

Long Flareside Kits

102565	48-52 LONG FLARE	\$191.50
102569	53-63 LONG FLARE	173.00
102550	64-72 LONG FLARE	164.50
120470	73-79 LONG FLARE	172.50

Flareside is same as Stepside

Unpolished Stainless Steel

FORD

Short Flareside Kits

102132	51-52 SHORT FLARE	\$123.50
120417	53-60 SHORT FLARE	127.00
120422	61-72 SHORT FLARE	123.50
120450	76-79 SHORT FLARE	144.50
120449	80-87 SHORT FLARE 6BS...	144.50
120425	83-87 SHORT FLARE 5BS...	138.00

Long Flareside Kits

102558	48-52 LONG FLARE	\$124.50
102568	53-63 LONG FLARE	145.50
102549	64-72 LONG FLARE	138.00
102371	73-79 LONG FLARE	144.50

Flareside is same as Stepside

Zinc Plated

FORD

Short Flareside Kits

110660	51-52 SHORT FLARE	\$75.50
120403	53-60 SHORT FLARE	72.00
120428	61-72 SHORT FLARE	75.50
120438	76-79 SHORT FLARE	117.00
120424	80-87 SHORT FLARE 6BS...	117.00
120401	83-87 SHORT FLARE 5BS...	114.50

Long Flareside Kits

102566	53-63 LONG FLARE	89.50
102548	64-72 LONG FLARE	86.50
120466	73-79 LONG FLARE	119.50

Flareside is same as Stepside

DODGE

Short Stepside Kits

100158	48-52 SHORT STEP	\$125.50
100179	53-60 SHORT STEP	133.50
100197	65 2nd-71 SHORT STEP	97.00
100159	72-85 SHORT STEP	80.00

Long Stepside Kits

100171	48-52 LONG 90"x 54"	\$130.50
100165	51-52 LONG 90"x 49"	125.50
102473	53-60 LONG 88"x 54"	140.50
130262	61-65 1st 88" (A-S only) .	92.50
100176	65-2nd-85 94" (A-S only) .	80.00

Power Wagon Kits

100210	46-50 95 3/4"	\$136.50
130265	51-52 95 3/4"	126.50
100187	53-68 93 3/4"	130.00

DODGE

Short Stepside Kits

100198	48-52 SHORT STEP	\$100.00
100222	53-60 SHORT STEP	105.50
100216	65 2nd-71 SHORT STEP	79.00
100180	72-85 SHORT STEP	65.00

Long Stepside Kits

100223	48-52 LONG 90"x 54"	\$101.00
100224	51-52 LONG 90"x 49"	97.00
102472	53-60 LONG 88"x 54"	112.00
130263	61-65 1st 88" (A-S only) .	80.00
100218	65-2nd-85 94" (A-S only) .	63.00

Power Wagon Kits

100172	46-50 95 3/4"	\$105.00
130266	51-52 95 3/4"	96.50
100201	53-68 93 3/4"	104.50

DODGE

Short Stepside Kits

100173	48-52 SHORT STEP	\$57.00
100190	53-60 SHORT STEP	56.00
100164	65 2nd-71 SHORT STEP	40.00
100199	72-85 SHORT STEP	36.00

Long Stepside Kits

100229	48-52 LONG 90"x 54"	\$59.00
100189	51-52 LONG 90"x 49"	57.00
102471	53-60 LONG 88"x 54"	58.50
130264	61-65 1st 88" (A-S only) .	42.00
100181	65-2nd-85 94" (A-S only) .	34.00

Power Wagon Kits

100204	46-50 95 3/4"	\$64.00
130267	51-52 95 3/4"	60.00
100212	53-68 93 3/4"	54.00

FENDER BOLT KITS



GM fender bolts kits include 5/16 x 3/4 phillips fender bolts . MAR-K also offers clutch head bolt kits in zinc plated steel for earlier models.

FORD fender bolts are 5/16 x 1" flat head with a square shoulder, in unpolished stainless only.

DODGE fender bolts kits include 5/16 x 1" phillips drive in original Dodge style or MAR-K design.

INDIVIDUAL FENDER BOLTS - SEE PAGES 34-35.

GM REAR FENDER BOLT KITS

100547	34-39 GM POLISHED STAINLESS	\$19.50
100548	34-39 GM UNPOLISHED STAINLESS.....	14.00
100549	34-39 GM ZINC PLATED	11.00
100550	34-39 GM ZINC PLATED CLUTCH HEAD	19.50
100551	40-46 GM POLISHED STAINLESS	27.00
100552	40-46 GM UNPOLISHED STAINLESS.....	19.50
100553	40-46 GM ZINC PLATED	15.50
100566	40-46 GM ZINC PLATED CLUTCH HEAD	27.00
100554	47-55 1st GM POLISHED STAINLESS	31.00

100555	47-55 1st GM UNPOLISHED STAINLESS	\$26.50
100556	47-55 1st GM ZINC PLATED	18.00
100567	47-55 1st GM ZINC PLATED CLUTCH HEAD	31.00
100557	55 2nd-66 GM POLISHED STAINLESS	46.50
100558	55 2nd-66 GM UNPOLISHED STAINLESS	40.00
100559	55 2nd-66 GM ZINC PLATED	26.50
100568	55 2nd-66 GM ZINC PLATED CLUTCH HEAD	46.50
100560	67-72 GM POLISHED STAINLESS	50.50
100561	67-72 GM UNPOLISHED STAINLESS.....	43.00
100562	67-72 GM ZINC PLATED	29.00
100563	73-87 GM POLISHED STAINLESS	46.50
100564	73-87 GM UNPOLISHED STAINLESS.....	40.00
100565	73-87 GM ZINC PLATED	26.50

FORD REAR FENDER BOLT KITS

102194	51-79 FORD UNPOLISHED STAINLESS	\$36.00
102197	80-87 FORD UNPOLISHED STAINLESS	45.00

DODGE REAR FENDER BOLT KITS

130244	39-47 DODGE POLISHED STAINLESS - MAR-K DESIGN \$	70.50
130245	39-47 DODGE UNPOL STAINLESS - MAR-K DESIGN	62.00
130246	39-47 DODGE ZINC PLATED - MAR-K DESIGN	44.00
130247	39-47 DODGE ZINC PLATED - ORIG DODGE STYLE	102.50
130248	48-52 DODGE POLISHED STAINLESS - MAR-K DESIGN .	62.00
130249	48-52 DODGE UNPOL STAINLESS - MAR-K DESIGN	54.00
130250	48-52 DODGE ZINC PLATED - MAR-K DESIGN	35.50
130251	48-52 DODGE ZINC PLATED - ORIG DODGE STYLE	90.50
130170	53-85 DODGE POLISHED STAINLESS - MAR-K DESIGN .	97.00
130171	53-85 DODGE UNPOL STAINLESS - MAR-K DESIGN	85.00
130127	53-85 DODGE ZINC PLATED - MAR-K DESIGN	60.50
130144	53-85 DODGE ZINC PLATED - ORIG DODGE STYLE	143.00