

All MAR-K bolts come with nut and lockwasher and all hardware pieces are priced by the piece (each) unless otherwise noted.



CARRIAGE BOLT

A smooth head and square shoulder; used in bed strips, bolted through square holes.

Polished Stainless

100112	1/4-20 x 3/4"	\$1.00
100113	1/4-20 x 1 1/4"	1.00
102719	1/4-20 x 1 1/2"	1.20
100114	1/4-20 x 2"	1.20
100115	1/4-20 x 2 1/2"	1.25
100116	5/16-18 x 3/4"	1.00
100117	5/16-18 x 1 1/2"	1.00
100118	5/16-24 x 1 1/2" FINE	1.00
102717	5/16-18 x 2"	1.25
100119	5/16-18 x 2 1/2"	1.25
100267	5/16-18 x 3"	1.25
100120	3/8-16 x 4"	2.00
100121	3/8-16 x 5"	2.50
100122	3/8-16 x 6"	3.25
100163	3/8-16 x 8 1/2"	4.75
100511	3/8-16 x 10"	7.25
100123	3/8-16 x 12"	7.75
100124	1/2-13 x 4 1/2"	3.50
100141	1/2-13 x 6"	5.00
102348	1/2-13 x 10 1/2"	15.00

Unpolished Stainless

100125	1/4-20 x 3/4"	\$0.75
100126	1/4-20 x 1 1/4"	0.75
102720	1/4-20 x 1 1/2"	1.00
100127	1/4-20 x 2"	1.00
100128	1/4-20 x 2 1/2"	1.00
100129	5/16-18 x 3/4"	0.75
100130	5/16-18 x 1 1/2"	0.75
100131	5/16-24 x 1 1/2" FINE	0.75
102718	5/16-18 x 2"	1.00
100132	5/16-18 x 2 1/2"	1.00
100268	5/16-18 x 3"	1.00
100133	3/8-16 x 4"	1.75
100134	3/8-16 x 5"	2.25
100135	3/8-16 x 6"	3.00
100166	3/8-16 x 8 1/2"	4.50
100512	3/8-16 x 10"	7.00
100136	3/8-16 x 12"	7.25
100137	1/2-13 x 4 1/2"	3.25
100144	1/2-13 x 6"	4.75
102347	1/2-13 x 10 1/2"	12.00

Zinc Plated

100138	1/4-20 x 3/4"	\$0.15
100139	1/4-20 x 1 1/4"	0.25
102312	1/4-20 x 2 1/2"	0.35
100142	5/16-18 x 3/4"	0.25
100143	5/16-18 x 1 1/2"	0.35
100269	5/16-18 x 3"	0.40
100146	3/8-16 x 4"	0.50
100147	3/8-16 x 5"	0.50
100148	3/8-16 x 6"	0.50
100169	3/8-16 x 8 1/2"	1.50
100513	3/8-16 x 10"	1.25
100149	3/8-16 x 12"	1.50
100150	1/2-13 x 4 1/2"	1.00
100145	1/2-13 x 6"	1.00
102343	1/2-13 x 10 1/2"	4.50



RIBBED NECK BOLT

Like the carriage bolt, the ribbed neck bolt has a smooth head; however, it gets its name from the "ribbed" shoulder which allows it to be bolted through a round hole.

Polished Stainless

100500	1/4-20 x 1 1/4"	\$1.25
100502	5/16-18 x 1 1/2"	1.25

Unpolished Stainless

100501	1/4-20 x 1 1/4"	\$1.00
100503	5/16-18 x 1 1/2"	1.00

Zinc Plated

100479	1/4-20 x 1 1/4"	\$0.45
100504	5/16-18 x 1 1/2"	0.45



PHILLIPS FENDER BOLT

Made to bolt the fenders to the bed side on stepside trucks. The Phillips fender bolts may also be used to attach a replacement angle strip to the bed side where it was originally welded on GM Stepsides.

5/16 x 3/4"

100477	POLISHED	\$1.75
100478	UNPOLISHED	1.50
100505	ZINC PLATED	1.00

5/16 x 1"

100489	POLISHED	\$2.25
100490	UNPOLISHED	2.00



PHILLIPS BED TO FRAME

Used on Ford truck beds to bolt the wood and strips to the frame. The oval head fits into the bed-to-frame washer, and the dome head bolt fits through the metal bed strip for mounting.

Polished Stainless

100509	1/2 x 5" DOME	\$8.00
100506	1/2 x 5" OVAL	6.50

Unpolished Stainless

100510	1/2 x 5" DOME	\$7.00
100507	1/2 x 5" OVAL	5.50

Zinc Plated

100508	1/2 x 5" OVAL	\$6.00
--------	---------------------	--------



SQUARE DRIVE BOLT

Used in early Ford Flareside wood beds. The flat head bolt is used through bed-to-frame washers in wood. The Dome head bolt is used in the bed strip holes that bolt through the frame.

7/16 x 3 3/4" Zinc Plated

100517	DOMEHEAD	\$6.00
100514	FLAT HEAD	4.00



BED-TO-FRAME WASHER

These washers are placed in the countersunk wood holes for the bed-to-frame bolt to pass through. The hole in the washer is square and offset in GM washers, round and centered for Ford. For Dodge washers, see "Hard to Find Hardware Pieces for Dodge Pickups" on page 35.

Polished Stainless

100100	1 1/2 x 3/8" SQUARE HOLE OFFSET (GM)	\$2.70
100102	1 7/8 x 1/2" ROUND HOLE CENTER (FORD)	2.20
100101	1 7/8 x 1/2" SQUARE HOLE OFFSET (GM)	2.95

Unpolished Stainless

100104	1 1/2 x 3/8" SQUARE HOLE OFFSET (GM)	\$1.75
100106	1 7/8 x 1/2" ROUND HOLE CENTER (FORD)	1.50
100105	1 7/8 x 1/2" SQUARE HOLE OFFSET (GM)	2.00

Zinc Plated

100108	1 1/2 x 3/8" SQUARE HOLE OFFSET (GM)	\$1.00
100110	1 7/8 x 1/2" ROUND HOLE CENTER (FORD)	0.60
100109	1 7/8 x 1/2" SQUARE HOLE OFFSET (GM)	1.00

Other Hardware Pieces and Bolt Kits not listed on this page:

Bed Bolt Kits - Standard Wood and Strips	See pages 24-26
Bed Bolt Kits - "No Bolts" Wood and Strips	See page 32
Fender Bolt Kits for Rear Fenders	See page 26
Front Bed Panel Mounting Bolt Kits	See page 36
Rear Cross Sill Mounting Bolt Kits	See page 40
Tailgate Hinges and Trunnions	See page 53
Tailgate Chain Parts	See page 52



STEP BOLT

Used to bolt the step to the support brace. They are available in zinc plated steel. The original size is 1/4 x 3/4. Also available in 5/16 x 3/4.

- 100317 1/4-20 x 3/4" \$0.65
- 100320 5/16-18 x 3/4" 0.75



HEX HEAD SCREW

This screw has a hexagon shaped head. Used in bolting the rear cross sill to the bed sides, or in bolting the front bed panel to the bed sides.

- 1/4-20 x 5/8"
- 100330 POLISHED \$0.85
- 100321 UNPOLISHED \$0.65
- 100323 ZINC PLATED \$0.15



CLUTCH HEAD BOLT

Available in zinc plated only, this 3/4" bolt is used to bolt the fender to the bed side on stepside trucks. Notice the shape of the drive. This is the original fender bolt for early GM stepsides.

- 100520 5/16 x 3/4" \$1.75



ACORNNUT

Acorn nut makes a decorative finish on a bolt that is exposed as well as protection of the thread from the elements. Use when bolting angle strips to bed side as an alternative to welding. Phillips screw sold separately.

- 100327 5/16" POLISHED \$1.00
- 100328 5/16" UNPOLISHED 0.75
- 100329 5/16" ZINC PLATED ... 0.25


HARD TO FIND HARDWARE PIECES FOR DODGE PICKUPS



SCREW AND CAPPED NUT

1/4-20 x 5/8" Stainless screw and plated steel nut with stainless cap for 78-79 "Red Express" trim boards. Complete trim board kits, see page 51.

- 130139 POLISHED \$4.35
- 130142 UNPOLISHED 3.85

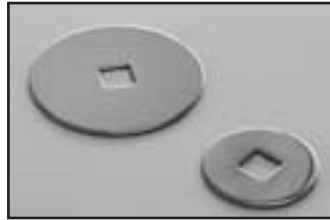

BED-TO-FRAME WASHER

3" Diameter washer (left) used for bed-to-frame mounting before 1953 model year.

- 100103 POLISHED \$3.45
- 100107 UNPOLISHED 2.75
- 100111 ZINC PLATED 1.00

1 7/8" Diameter washer (right) with 1/2" square hole in center. For bed-to-frame mounting 53-60 Step, 61-65 Long Step and 53-68 Power Wagon.

- 100200 POLISHED \$2.95
- 100203 UNPOLISHED 2.00
- 100206 ZINC PLATED 1.00



BED-TO-FRAME WASHER

1 1/2" Diameter washer (left) with 1/2" square hole offset

- 100211 POLISHED \$2.70
- 100217 UNPOLISHED 1.75
- 100220 ZINC PLATED 1.00

1 1/2" Diameter washer (right) with 3/8" square hole offset. Used for bed-to-frame mounting for 65-85 stepsides.

- 100100 POLISHED \$2.70
- 100104 UNPOLISHED 1.75
- 100108 ZINC PLATED 1.00




INDENTED HEX WASHER HEAD BOLT

This bolt is used in several instances, most often in bolting the front bed panel to the bed side, as well as bolting the rear cross sill to the bed.

5/16 x 3/4"

- 100324 POLISHED \$1.00
- 100325 UNPOLISHED 0.75
- 100326 ZINC PLATED 0.50

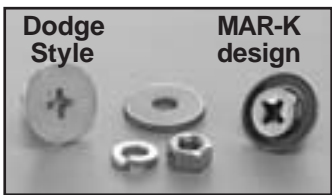

PHILLIPS FENDER BOLT

DODGE STYLE 5/16 x 1" Phillips bolts with 1" diameter head. (top left) Includes nut and 1" washer. Mounts fenders to the bed sides.

- 130141 ZINC PLATED \$5.80

MAR-K DESIGN 5/16 x 3/4"

Phillips stainless bolts with 1" diameter countersunk washer. (top right) Includes nut and 1" washer. Mounts fenders to the bed sides.

- 130168 POLISHED \$4.00
- 130169 UNPOLISHED 3.50
- 130179 ZINC PLATED 2.50

Fender bolt kits, see page 26.

HEX HEAD SCREW

5/16-18 x 3/4" Hex head screw and nut with washer. Attaches front bed panel to the bed sides.

- 130124 POLISHED \$1.25
- 130125 UNPOLISHED 1.00
- 130126 ZINC PLATED 0.90

FLATHEAD SCREW

5/16-18 x 5/8" Phillips stainless flat head screw. Attaches center tailgate hinge to rear sill. Two (2) required.

- 130136 POLISHED \$1.25
- 130137 UNPOLISHED 1.00

FENDER WASHER

1 7/16 x 1 x 1/8" Rectangular washer used with fender mounting bolt and nut. For replacement only.

- 130145 ZINC PLATED \$0.85

LONG THREADED ROD

5/16" Diameter rod 55 1/2" long threaded each end for mounting front bed panel to bed sides. Includes nuts and washers. High-side bed only - 54" wide.

- 100302 STEEL \$10.00

INDENTED HEX WASHER HEAD BOLT

3/8-16 x 1" Indented hex head bolt with captive washer for bed cross sills to frame attachment. 72-85 only.

- 130211 ZINC PLATED \$0.85



T-BOLT FASTENER FOR HIDDEN BOLTS BED STRIPS

Use with hidden bolts Bed Strips for replacement or custom.

Unpolished Stainless

- 100518 T-Bolt 1 1/4" \$2.00
- 100519 T-Bolt 2" 3.50