


MAR-K
"NO BOLTS"
BED WOOD/STRIPS

"NO BOLTS" WOOD BEDS -

- You can install **MAR-K** bed wood with the large bed-to-frame bolts hidden under the wood.
- This gives a smooth, clean look to the bed floor, especially when used with **MAR-K** "hidden bolt" bed strips.
- Our bed strips with hidden fasteners were developed by **MAR-K** to give your bed a smooth custom look. The bed strips have special bolts which slide in the groove on the underside of the strip to adjust to any hole location.
- The bottom surface of the wood is drilled with a recessed clearance around the bolt head. The wood is grooved on the sides for the bed strips just like the original wood.
- The boards and strips rest on the cross sills as original, completely hiding the bed-to-frame and bed strip bolts.
- No welding is needed for installation of a "no bolts" bed. The bed-to-frame bolts go through square mounting holes in the cross sills and the bolt head is under the bed wood as shown below.
- No bolts wood beds are *made in Oklahoma City, USA.*

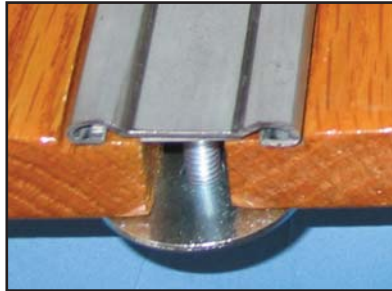

Polished stainless material is put into a roll former to make the bed strips with hidden fasteners.

CUSTOM BEDS: **MAR-K** can make hidden bolts bed strips to fit almost any truck. Aluminum bed strips are available in custom lengths of up to 97" long. Hidden fasteners are included. Polished Stainless, Unpolished Stainless and Steel hidden bolts bed strips are available in nearly any custom length and also include the fasteners. Call our sales staff to order.

Tech Tip: Cross Sills and No Bolts Wood -

MAR-K's "no bolts" system may require modification to your existing cross sills. If you are ordering **MAR-K** cross sills with your bed wood, the cross sill holes punched are square to accommodate the square shoulder of the bed-to-frame carriage bolt. If you are using stock cross sills, the holes will be round. Use a file to make the holes slightly larger and more square to fit the bolt.



HIDDEN FASTENERS:

These special bolts slide into the groove on the underside of the bed strips to adjust to any bolt location. Includes nut and washers.

Bed strips with hidden fasteners include all fasteners needed to replace the original bolts. Order this fastener only if you need extras or for custom applications. Available in 1-1/4" length for most bed strips and 2" for special applications. Please specify what size fasteners you need when you order your strips.

Bed Strip Fasteners

100518	T-Bolt FASTENERS 1-1/4"	\$2.25
100519	T-Bolt FASTENERS 2"	3.75



The bottom surface of the wood is drilled with a recessed clearance around the bolt head. The boards and strips rest on the cross sills as original, completely hiding the bed-to-frame and bed strip bolts.

MAR-K's oak bed wood is show quality and pine bed wood is recommended for daily driver use. For more detailed information on oak and pine bed wood, please see the bed wood section, page 14.



Oak Bed Wood with Hidden Holes

GM

Short Stepside \$363 set

100631HM	34-36 SHORT STEP CHEVY
110160HM	37-38 SHORT STEP CHEVY
110792HM	39 SHORT STEP CHEVY
110162HM	40-45 SHORT STEP CHEVY
110164HM	46 SHORT STEP CHEVY
110166HM	47-51 SHORT STEP
110168HM	51-53 SHORT STEP
110170HM	54-55 1st SHORT STEP
110172HM	55-2nd-59 SHORT STEP
110174HM	60-62 SHORT STEP
110176HM	63-66 SHORT STEP
110178HM	67-72 SHORT STEP
110180HM	73-87 SHORT STEP

Long Stepside \$395 set

100635HM	35-36 LONG STEP GMC
100639HM	37-38 LONG STEP GMC
110182HM	40-45 LONG STEP CHEVY
110052HM	46 LONG STEP CHEVY
110184HM	47-51 LONG 1/2 Ton GMC
110186HM	47-51 LONG 3/4 Ton
110330HM	51-53 LONG 1/2 Ton GMC
110332HM	51-53 LONG 3/4 Ton
110188HM	54-55 1st LONG 1/2 Ton GMC
100743HM	54-55 1st LONG 3/4 Ton
100741HM	55-2nd-57 LONG STEP 89"
110194HM	57-59 LONG STEP 97"
110198HM	60-62 LONG STEP
110200HM	63-66 LONG STEP
110202HM	67-72 LONG STEP
110204HM	73-87 LONG STEP - 14 1/8"
110204HM-A	73-87 LONG STEP - 28 1/16"

2nd mtg hole at 14 1/8" or 28 1/16"

Short Fleetside \$414 set

110206HM	58-59 SHORT WIDE
110208HM	60-62 SHORT WIDE
110210HM	63-66 SHORT WIDE
110212HM	67-72 SHORT WIDE

Long Fleetside \$477 set

110214HM	58-59 LONG WIDE
110216HM	60-62 LONG WIDE
110218HM	63-66 LONG WIDE
110220HM	67-72 LONG WIDE
110226HM	73-80 LONG WIDE - 11 1/2"
110226HM-A	73-80 LONG WIDE - 25 3/8"

2nd mtg hole at 11 1/2" or 25 3/8"



Pine Bed Wood with Hidden Holes

GM

Short Stepside \$225 set

100633HM	34-36 SHORT STEP CHEVY
110161HM	37-38 SHORT STEP CHEVY
110793HM	39 SHORT STEP CHEVY
110163HM	40-45 SHORT STEP CHEVY
110165HM	46 SHORT STEP CHEVY
110167HM	47-51 SHORT STEP
110169HM	51-53 SHORT STEP
110171HM	54-55 1st SHORT STEP
110173HM	55-2nd-59 SHORT STEP
110175HM	60-62 SHORT STEP
110177HM	63-66 SHORT STEP
110179HM	67-72 SHORT STEP
110181HM	73-87 SHORT STEP

Long Stepside \$250 set

100637HM	35-36 LONG STEP GMC
100681HM	37-38 LONG STEP GMC
110183HM	40-45 LONG STEP CHEVY
110053HM	46 LONG STEP CHEVY
110185HM	47-51 LONG 1/2 Ton GMC
110187HM	47-51 LONG STEP 3/4 Ton
110331HM	51-53 LONG 1/2 Ton GMC
110333HM	51-53 LONG STEP 3/4 Ton
110189HM	54-55 1st LONG 1/2 Ton GMC
100744HM	54-55 1st LONG 3/4 Ton
100742HM	55-2nd-57 LONG STEP 89"
110195HM	57-59 LONG STEP 97"
110199HM	60-62 LONG STEP
110201HM	63-66 LONG STEP
110203HM	67-72 LONG STEP
110205HM	73-87 LONG STEP - 14 1/8"
110205HM-A	73-87 LONG STEP - 28 1/16"

2nd mtg hole at 14 1/8" or 28 1/16"

Short Fleetside \$275 set

110207HM	58-59 SHORT WIDE
110209HM	60-62 SHORT WIDE
110211HM	63-66 SHORT WIDE
110213HM	67-72 SHORT WIDE

Long Fleetside \$314 set

110215HM	58-59 LONG WIDE
110217HM	60-62 LONG WIDE
110219HM	63-66 LONG WIDE
110221HM	67-72 LONG WIDE
110227HM	73-80 LONG WIDE - 11 1/2"
110227HM-A	73-80 LONG WIDE - 25 3/8"

2nd mtg hole at 11 1/2" or 25 3/8"



Aluminum Bed Strips with Fasteners

GM

Short Stepside Sets

111001	30-33 SHORT STEP CHEVY	\$175.00
111002	34-36 SHORT STEP CHEVY ..	175.00
111004	37-39 SHORT STEP CHEVY ..	175.00
111007	40-45 SHORT STEP CHEVY ..	175.00
111009	46 SHORT STEP CHEVY	210.00
111011	47-51 SHORT STEP	280.00
111013	51-53 SHORT STEP	245.00
111016	54-59 SHORT STEP	245.00
111022	60-66 SHORT STEP	245.00
111028	67-72 SHORT STEP	245.00
111032	73-87 SHORT STEP	210.00

Long Stepside Sets

111003	35-36 LONG STEP GMC	\$200.00
111006	37-38 LONG STEP GMC	200.00
111005	37-39 LONG STEP CHEVY	200.00
111008	40-45 LONG STEP CHEVY	200.00
111010	46 LONG STEP CHEVY	240.00
111012	47-51 LONG STEP	320.00
111014	51-53 LONG STEP	280.00
111017	54-55 1ST LONG STEP	280.00
111018	55-2nd-57 LONG STEP 89"	280.00
111019	57-59 LONG STEP 97"	280.00
111024	60-62 LONG STEP	280.00
111026	63-66 LONG STEP	280.00
111030	67-72 LONG STEP	280.00
111033	73-87 LONG STEP	240.00

Short Fleetside Sets

111020	58-59 SHORT WIDE	\$385.00
111023	60-66 SHORT WIDE	315.00
111029	67-72 SHORT WIDE	315.00

Long Fleetside Sets

111021	58-59 LONG WIDE	\$440.00
111025	60-62 LONG WIDE	360.00
111027	63-66 LONG WIDE	360.00
111031	67-72 LONG WIDE	360.00
111034	73-80 LONG WIDE	240.00

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.



BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 32.

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.



Polished Stainless Bed Strips with Fasteners

Unpolished Stainless Bed Strips with Fasteners

Steel Bed Strips with Fasteners

GM

Short Stepside \$47.00 ea

102315HB	30-33	SHORT STEP CHEVY
100869HB	34-36	SHORT STEP CHEVY
110004HB	37-39	SHORT STEP CHEVY
110001HB	40-45	SHORT STEP CHEVY
110010HB	46	SHORT STEP CHEVY
110028HB	47-51	SHORT STEP
110094HB	51-53	SHORT STEP
110016HB	54-59	SHORT STEP
110019HB	60-66	SHORT STEP
110022HB	67-72	SHORT STEP
110025HB	73-87	SHORT STEP

GM

Short Stepside \$41.50 ea

102316HB	30-33	SHORT STEP CHEVY
100870HB	34-36	SHORT STEP CHEVY
110005HB	37-39	SHORT STEP CHEVY
110002HB	40-45	SHORT STEP CHEVY
110011HB	46	SHORT STEP CHEVY
110029HB	47-51	SHORT STEP
110095HB	51-53	SHORT STEP
110017HB	54-59	SHORT STEP
110020HB	60-66	SHORT STEP
110023HB	67-72	SHORT STEP
110026HB	73-87	SHORT STEP

GM

Short Stepside \$34.50 ea

102308HB	30-33	SHORT STEP CHEVY
100883HB	34-36	SHORT STEP CHEVY
110006HB	37-39	SHORT STEP CHEVY
110003HB	40-45	SHORT STEP CHEVY
110012HB	46	SHORT STEP CHEVY
110030HB	47-51	SHORT STEP
110096HB	51-53	SHORT STEP
110018HB	54-59	SHORT STEP
110021HB	60-66	SHORT STEP
110024HB	67-72	SHORT STEP
110027HB	73-87	SHORT STEP

Long Stepside \$52.00 ea

100890HB	35-36	LONG STEP GMC
110031HB	37-38	LONG STEP GMC
110037HB	37-39	LONG STEP CHEVY
100875HB	40-45	LONG STEP CHEVY
100878HB	46	LONG STEP CHEVY
100881HB	47-51	LONG STEP
100885HB	51-53	LONG STEP
110043HB	54-55	1ST LONG STEP
110046HB	55	2nd-57 LONG STEP 89"
110049HB	57-59	LONG STEP 97"
110055HB	60-62	LONG STEP
110061HB	63-66	LONG STEP
110064HB	67-72	LONG STEP
110067HB	73-87	LONG STEP

Long Stepside \$46.50 ea

100900HB	35-36	LONG STEP GMC
110032HB	37-38	LONG STEP GMC
110038HB	37-39	LONG STEP CHEVY
100876HB	40-45	LONG STEP CHEVY
100879HB	46	LONG STEP CHEVY
100882HB	47-51	LONG STEP
100886HB	51-53	LONG STEP
110044HB	54-55	1ST LONG STEP
110047HB	55	2nd-57 LONG STEP 89"
110050HB	57-59	LONG STEP 97"
110059HB	60-62	LONG STEP
110062HB	63-66	LONG STEP
110065HB	67-72	LONG STEP
110068HB	73-87	LONG STEP

Long Stepside \$39.50 ea

100910HB	35-36	LONG STEP GMC
110033HB	37-38	LONG STEP GMC
110039HB	37-39	LONG STEP CHEVY
100877HB	40-45	LONG STEP CHEVY
100880HB	46	LONG STEP CHEVY
100884HB	47-51	LONG STEP
100887HB	51-53	LONG STEP
110045HB	54-55	1ST LONG STEP
110048HB	55	2nd-57 LONG STEP 89"
110051HB	57-59	LONG STEP 97"
110060HB	60-62	LONG STEP
110063HB	63-66	LONG STEP
110066HB	67-72	LONG STEP
110069HB	73-87	LONG STEP

1 Ton Stepside \$52.00 ea

110327HB	47-53	STEPSIDE 107"
102434HB	54-59	STEPSIDE 107 1/4"

1 Ton Stepside \$46.50 ea

110328HB	47-53	STEPSIDE 107"
102436HB	54-59	STEPSIDE 107 1/4"

1 Ton Stepside \$39.50 ea

110329HB	47-53	STEPSIDE 107"
110684HB	54-59	STEPSIDE 107 1/4"

Panel Truck/Canopy Express

102664HB	47-51	1/2 TON 82" . \$250.00 set
110495HB	52-55	1/2 TON 79.5" .. \$47.00 ea

Panel Truck/Canopy Express

102663HB	47-51	1/2 TON 82" \$175.00 set
110496HB	52-55	1/2 TON 79.5"\$41.50 ea

Panel Truck/Canopy Express

102662HB	47-51	1/2 TON 82" \$100.00 set
110497HB	52-55	1/2 TON 79.5"\$34.50 ea

Short Fleetside Sets

110070HB	58-59	SHORT WIDE \$517.00
110073HB	60-66	SHORT WIDE \$423.00
110076HB	67-72	SHORT WIDE \$423.00

Short Fleetside Sets

110071HB	58-59	SHORT WIDE \$456.50
110074HB	60-66	SHORT WIDE \$373.50
110077HB	67-72	SHORT WIDE \$373.50

Short Fleetside Sets

110072HB	58-59	SHORT WIDE \$379.50
110075HB	60-66	SHORT WIDE \$310.50
110078HB	67-72	SHORT WIDE \$310.50

Long Fleetside Sets

110082HB	58-59	LONG WIDE \$572.00
110085HB	60-62	LONG WIDE \$468.00
110088HB	63-66	LONG WIDE \$468.00
110091HB	67-72	LONG WIDE \$468.00
110097HB	73-80	LONG WIDE \$312.00

Long Fleetside Sets

110083HB	58-59	LONG WIDE \$491.50
110086HB	60-62	LONG WIDE \$418.50
110089HB	63-66	LONG WIDE \$418.50
110092HB	67-72	LONG WIDE \$418.50
110098HB	73-80	LONG WIDE \$279.00

Long Fleetside Sets

110084HB	58-59	LONG WIDE \$434.50
110087HB	60-62	LONG WIDE \$355.50
110090HB	63-66	LONG WIDE \$355.50
110093HB	67-72	LONG WIDE \$355.50
110099HB	73-80	LONG WIDE \$237.00

Longhorn Sets


110100HB	69-72	LONGHORN \$468.00
----------	-------	-------------------------

Longhorn Sets

110101HB	69-72	LONGHORN \$418.50
----------	-------	-------------------------

Longhorn Sets

110102HB	69-72	LONGHORN \$355.50
----------	-------	-------------------------

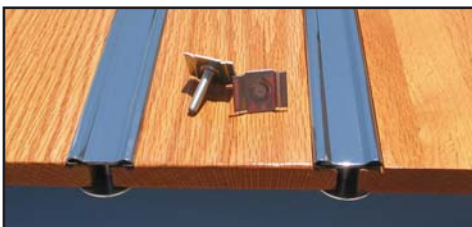

Steel must be painted to prevent rusting.

**TO ORDER CALL 1-405-721-7945.....FAX 1-405-721-8906...www.mar-k.com
OR MAIL TO 6625 WEST WILSHIRE BLVD, OKLAHOMA CITY, OK 73132**

Oak Bed Wood with Hidden Holes

FORD

Short Flareside\$363 set
 102603HM 51-52 SHORT FLARE
 120384HM 53-60 SHORT FLARE
 120388HM 61-64 SHORT FLARE
 120394HM 65-72 SHORT FLARE

Short Flareside\$382 set
 120392HM 76-79 SHORT FLARE
 120386HM 80-87 SHORT FLARE

Long Flareside\$414 set
 102772HM 53-60 LONG FLARE
 102762HM 64-66 LONG FLARE
 102763HM 67-72 LONG FLARE

Long Flareside\$426 set
 102722HM 76-79 LONG FLARE

Flareside is same as Stepside

Pine Bed Wood with Hidden Holes

FORD

Short Flareside\$225 set
 102605HM 51-52 SHORT FLARE
 120391HM 53-60 SHORT FLARE
 120397HM 61-64 SHORT FLARE
 120399HM 65-72 SHORT FLARE

Short Flareside\$250 set
 120385HM 76-79 SHORT FLARE
 120389HM 80-87 SHORT FLARE

Flareside is same as Stepside

Aluminum Bed Strips with Fasteners

FORD

Short Flareside Sets
 111049 51-52 SHORT FLARE \$245.00
 111051 53-60 SHORT FLARE 245.00
 111053 61-64 SHORT FLARE 245.00
 111056 65-72 SHORT FLARE 245.00

Short Flareside Sets
 111058 76-87 SHORT FLARE \$210.00

Long Flareside Sets
 111052 53-60 LONG FLARE \$240.00
 111054 61-63 LONG FLARE 240.00
 111055 64-66 LONG FLARE 240.00
 111057 67-72 LONG FLARE 240.00
 111059 73-79 LONG FLARE 240.00

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.
 Flareside is same as Stepside

DODGE

Short Stepside\$363 set
 130319HM 48-52 SHORT STEP
 100331HM 53-60 SHORT

Long Stepside\$395 set
 100322HM 51-52 LONG 90" x 49"

Long Stepside\$414 set
 130328HM 48-52 LONG 90" x 54"
 102475HM 53-60 LONG 88" x 54"

Power Wagon\$450 set
 102364HM 46-50 95 3/4"
 130301HM 51-52 95 3/4"
 130309HM 53-68 93 3/4"

DODGE

Short Stepside\$225 set
 130320HM 48-52 SHORT STEP
 100214HM 53-60 SHORT

Long Stepside\$250 set
 100332HM 51-52 LONG 90" x 49"

DODGE

Short Stepside Sets
 111035 39-47 SHORT STEP \$175.00
 111037 48-52 SHORT STEP 175.00
 111040 53-54 SHORT STEP 245.00
 111042 55-60 SHORT STEP 245.00
 111045 61-65 1st SHORT STEP 210.00
 111047 65-2nd-85 SHORT STEP 210.00

Long Stepside Sets
 111036 39-47 LONG STEP 90" \$200.00
 111038 48-52 LONG STEP 90" 200.00
 111041 53-54 LONG STEP 88" 280.00
 111043 55-60 LONG STEP 88" 280.00
 111046 61-65 1st LONG STEP 88" .. 240.00
 111048 65-2nd-85 LONG STEP 94" . 240.00

Power Wagon Sets
 111039 46-52 95 3/4" \$200.00
 111044 53-68 93 3/4" 280.00

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.



BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 32.

Polished Stainless Bed Strips with Fasteners

Unpolished Stainless Bed Strips with Fasteners

Steel Bed Strips with Fasteners

FORD

Short Flareside \$47.00 ea

120363HB	28-31 FORD MODEL A
120338HB	51-52 SHORT FLARE
120341HB	53-60 SHORT FLARE
120349HB	61-64 SHORT FLARE
120353HB	65-72 SHORT FLARE
120346HB	76-87 SHORT FLARE

Long Flareside \$52.00 ea

102544HB	53-60 LONG FLARE
105185HB	61-63 LONG FLARE
105184HB	64-66 LONG FLARE
102553HB	67-72 LONG FLARE
120542HB	73-79 LONG FLARE

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.
 Flareside is same as Stepside

FORD

Short Flareside \$41.50 ea

120381HB	28-31 FORD MODEL A
120350HB	51-52 SHORT FLARE
120345HB	53-60 SHORT FLARE
120339HB	61-64 SHORT FLARE
120342HB	65-72 SHORT FLARE
120359HB	76-87 SHORT FLARE

Long Flareside \$46.50 ea

102545HB	53-60 LONG FLARE
105189HB	61-63 LONG FLARE
105183HB	64-66 LONG FLARE
102552HB	67-72 LONG FLARE
120541HB	73-79 LONG FLARE

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.
 Flareside is same as Stepside

FORD

Short Flareside \$34.50 ea

120374HB	28-31 FORD MODEL A
120344HB	51-52 SHORT FLARE
120354HB	53-60 SHORT FLARE
120348HB	61-64 SHORT FLARE
120357HB	65-72 SHORT FLARE
120351HB	76-87 SHORT FLARE

Long Flareside \$39.50 ea

102546HB	53-60 LONG FLARE
105190HB	61-63 LONG FLARE
102372HB	64-66 LONG FLARE
102551HB	67-72 LONG FLARE
120540HB	73-79 LONG FLARE

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.
 Flareside is same as Stepside

DODGE

Short Stepside \$47.00 ea

130274HB	39-47 SHORT STEP
100155HB	48-52 SHORT STEP
100177HB	53-54 SHORT STEP
130268HB	55-60 SHORT STEP
130306HB	61-65 1st SHORT STEP
100196HB	65-2nd-85 SHORT STEP

Long Stepside \$52.00 ea

130311HB	39-47 LONG STEP 90"
100156HB	48-52 LONG STEP 90"
100205HB	53-54 LONG STEP 88"
102456HB	55-60 LONG STEP 88"
130277HB	61-65 1st LONG STEP 88"
100186HB	65-2nd-85 LONG STEP 94"

Power Wagon \$52.00 ea

100221HB	46-52 95 3/4"
100170HB	53-68 93 3/4"

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.

DODGE

Short Stepside \$41.50 ea

130275HB	39-47 SHORT STEP
100185HB	48-52 SHORT STEP
100193HB	53-54 SHORT STEP
130269HB	55-60 SHORT STEP
130307HB	61-65 1st SHORT STEP
100161HB	65-2nd-85 SHORT STEP

Long Stepside \$46.50 ea

130312HB	39-47 LONG STEP 90"
100194HB	48-52 LONG STEP 90"
100162HB	53-54 LONG STEP 88"
102457HB	55-60 LONG STEP 88"
130278HB	61-65 1st LONG STEP 88"
100215HB	65-2nd-85 LONG STEP 94"

Power Wagon \$46.50 ea

100231HB	46-52 95 3/4"
100195HB	53-68 93 3/4"

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.

DODGE

Short Stepside \$34.50 ea

130276HB	39-47 SHORT STEP
100168HB	48-52 SHORT STEP
100183HB	53-54 SHORT STEP
130270HB	55-60 SHORT STEP
130308HB	61-65 1st SHORT STEP
100174HB	65-2nd-85 SHORT STEP


Long Stepside \$39.50 ea

130313HB	39-47 LONG STEP 90"
100167HB	48-52 LONG STEP 90"
100191HB	53-54 LONG STEP 88"
102458HB	55-60 LONG STEP 88"
130279HB	61-65 1st LONG STEP 88"
100208HB	65-2nd-85 LONG STEP 94"

Power Wagon \$39.50 ea

100219HB	46-52 95 3/4"
100175HB	53-68 93 3/4"

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.

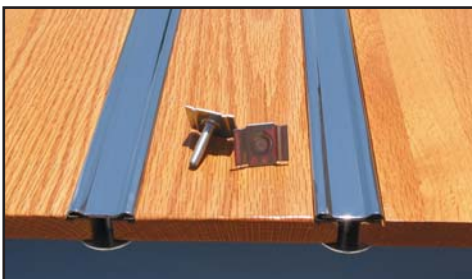

Steel must be painted to prevent rusting.

BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 32.



THESE BOLT KITS ARE MADE TO USE WITH MAR-K'S BED WOOD WITH HIDDEN HOLES AND BED STRIPS WITH HIDDEN FASTENERS.

Bed-to-Frame/Sides Polished

Bed-to-Frame/Sides Unpolished

Bed-to-Frame/Sides Zinc Plated

GM

Short Stepside Kits

110786	34-36 SHORT STEP CHEVY ..	\$52.00
111700	37-39 SHORT STEP CHEVY	52.00
111703	40-46 SHORT STEP CHEVY	54.00
111715	47-53 SHORT STEP	57.00
111732	54-55 1st SHORT STEP	52.00
111738	55-2nd-59 SHORT STEP	52.00
111741	55-58 CAMEO/SUBURBAN	88.50
111757	60-66 SHORT STEP	52.00
111781	67-72 SHORT STEP	52.00
111793	73-87 SHORT STEP	77.00

Long Stepside Kits

111709	35-36 LONG STEP GMC	\$77.00
111712	37-38 LONG STEP GMC	58.00
111706	40-46 LONG STEP CHEVY	58.00
111718	47-53 LONG STEP	66.50
111735	54-55 1st LONG STEP	54.00
111745	55 2nd-57 LONG STEP 89"	54.00
111748	57-59 LONG STEP 97"	60.00
111763	60-62 LONG STEP	66.00
111775	63-66 LONG STEP	54.00
111787	67-72 LONG STEP	54.00
111796	73-87 LONG STEP	80.00

Short Fleetside Kits

111751	58-59 SHORT WIDE	\$62.00
111760	60-66 SHORT WIDE	64.00
111784	67-72 SHORT WIDE	65.50

Long Fleetside Kits

111754	58-59 LONG WIDE	\$72.00
111766	60-62 LONG WIDE	74.50
111778	63-66 LONG WIDE	68.00
111790	67-72 LONG WIDE	68.00
111799	73-80 LONG WIDE	82.00

GM

Short Stepside Kits

110787	34-36 SHORT STEP CHEVY ..	\$42.00
111701	37-39 SHORT STEP CHEVY	42.00
111704	40-46 SHORT STEP CHEVY	44.00
111716	47-53 SHORT STEP	54.00
111733	54-55 1st SHORT STEP	49.00
111739	55-2nd-59 SHORT STEP	42.00
111742	55-58 CAMEO/SUBURBAN	85.50
111758	60-66 SHORT STEP	42.00
111782	67-72 SHORT STEP	42.00
111794	73-87 SHORT STEP	67.00

Long Stepside Kits

111710	35-36 LONG STEP GMC	\$74.50
111713	37-38 LONG STEP GMC	48.00
111707	40-46 LONG STEP CHEVY	48.00
111719	47-53 LONG STEP	63.00
111736	54-55 1st LONG STEP	44.00
111746	55 2nd-57 LONG STEP 89"	50.00
111749	57-59 LONG STEP 97"	50.00
111764	60-62 LONG STEP	56.00
111776	63-66 LONG STEP	44.00
111788	67-72 LONG STEP	44.00
111797	73-87 LONG STEP	70.00

Short Fleetside Kits

111752	58-59 SHORT WIDE	\$52.00
111761	60-66 SHORT WIDE	58.00
111785	67-72 SHORT WIDE	59.00

Long Fleetside Kits

111755	58-59 LONG WIDE	\$62.00
111767	60-62 LONG WIDE	67.50
111779	63-66 LONG WIDE	61.00
111791	67-72 LONG WIDE	59.00
111800	73-80 LONG WIDE	72.00

GM

Short Stepside Kits

110788	34-36 SHORT STEP CHEVY ..	\$27.00
111702	37-39 SHORT STEP CHEVY	27.00
111705	40-46 SHORT STEP CHEVY	27.00
111717	47-53 SHORT STEP	29.00
111734	54-55 1st SHORT STEP	27.00
111740	55-2nd-59 SHORT STEP	27.00
111743	55-58 CAMEO/SUBURBAN	30.00
111759	60-66 SHORT STEP	27.00
111783	67-72 SHORT STEP	27.00
111795	73-87 SHORT STEP	37.00

Long Stepside Kits

111711	35-36 LONG STEP GMC	\$35.00
111714	37-38 LONG STEP GMC	31.00
111708	40-46 LONG STEP CHEVY	31.00
111720	47-53 LONG STEP	34.00
111737	54-55 1st LONG STEP	29.00
111747	55 2nd-57 LONG STEP 89"	30.00
111750	57-59 LONG STEP 97"	31.00
111765	60-62 LONG STEP	30.00
111777	63-66 LONG STEP	27.00
111789	67-72 LONG STEP	30.00
111798	73-87 LONG STEP	39.00

Short Fleetside Kits

111753	58-59 SHORT WIDE	\$29.00
111762	60-66 SHORT WIDE	32.00
111786	67-72 SHORT WIDE	32.00

Long Fleetside Kits

111756	58-59 LONG WIDE	\$32.00
111768	60-62 LONG WIDE	34.00
111780	63-66 LONG WIDE	31.50
111792	67-72 LONG WIDE	31.00
111801	73-80 LONG WIDE	46.00

FORD

Short Flareside Kits

111802	51-52 SHORT FLARE	\$67.00
111805	53-60 SHORT FLARE	64.00
111811	61-72 SHORT FLARE	67.00
111823	76-87 SHORT FLARE	81.00

Long Flareside Kits

111808	53-72 LONG FLARE	\$81.00
111826	73-79 LONG FLARE	81.00

(Flareside is same as Stepside)

FORD

Short Flareside Kits

111803	51-52 SHORT FLARE	\$57.00
111806	53-60 SHORT FLARE	55.00
111812	61-72 SHORT FLARE	57.00
111824	76-87 SHORT FLARE	67.00

Long Flareside Kits

111809	53-72 LONG FLARE	\$68.00
111827	73-79 LONG FLARE	67.00

(Flareside is same as Stepside)

FORD

Short Flareside Kits

111804	51-52 SHORT FLARE	\$46.00
111807	53-60 SHORT FLARE	44.00
111813	61-72 SHORT FLARE	46.00
111825	76-87 SHORT FLARE	51.00

Long Flareside Kits

111810	53-72 LONG FLARE	\$51.00
111828	73-79 LONG FLARE	51.00

(Flareside is same as Stepside)

DODGE

Short Stepside Kits

111835	48-52 SHORT STEP	\$60.00
111844	53-60 SHORT STEP	60.00

Long Stepside Kits

111838	48-52 LONG 90"	\$62.00
111847	53-60 LONG 88"x 54"	67.00

Power Wagon Kits

111832	46-50 95 3/4"	\$62.00
111841	51-52 95 3/4"	62.00

DODGE

Short Stepside Kits

111836	48-52 SHORT STEP	\$51.00
111845	53-60 SHORT STEP	51.00

Long Stepside Kits

111839	48-52 LONG 90"	\$52.00
111848	53-60 LONG 88"x 54"	56.00

Power Wagon Kits

111833	46-50 95 3/4"	\$56.50
111842	51-52 95 3/4"	52.00

DODGE

Short Stepside Kits

111837	48-52 SHORT STEP	\$27.00
111846	53-60 SHORT STEP	29.00

Long Stepside Kits

111840	48-52 LONG 90"	\$27.00
111849	53-60 LONG 88"x 54"	27.00

Power Wagon Kits

111834	46-50 95 3/4"	\$29.00
111843	51-52 95 3/4"	27.00